

MP11SE色一覧

カテゴリー名	音色名
PIANO: Concert	SK Concert Grand
	EX Concert Grand
	SK-5 Grand
PIANO: Pop	Pop Piano
	EX Studio Grand
	SK-5 Studio Grand
PIANO: Jazz	SK Jazz Grand
	Jazz Grand
	Standard Grand
PIANO: Uplight/Mono	Uplight Piano
	Mono SK Grand
	Mono EX Grand
E.PIANO: Tine	Tine EP1
	Tine EP2
	Tine EP3
E.PIANO: Reed	Reed EP1
	Reed EP2
	Reed EP3
E.PIANO: Modern	Modern EP1
	Modern EP2
	Modern EP3

カテゴリー名	音色名
E.PIANO: E.Grand/Clavi	Electric Grand
	Clavi 1
	Clavi 2
SUB: Strings	String Ensemble
	Beautiful Str.
	String Pad
	Warm Strings
SUB: Pad	Pad 1
	Pad 2
	Pad 3
	Pad 4
SUB: Harpsi/Mallet	Harpsichord
	Vibraphone
	Celesta
	Marimba
SUB: Bass	Wood Bass
	Finger Bass
	Fretless Bass
	Wood Bass & Ride